


How to measure your opening to order the Replacement Window

WIDTH

Measure between the jambs at 3 points.
Measure at Top, Middle and Bottom of Window opening.
Measure from the (W1) surface of the jambs,
not from the trim strips or parting strips in your
old window opening.



Use the **SMALLEST** of these 3 width measurements
to order the window!

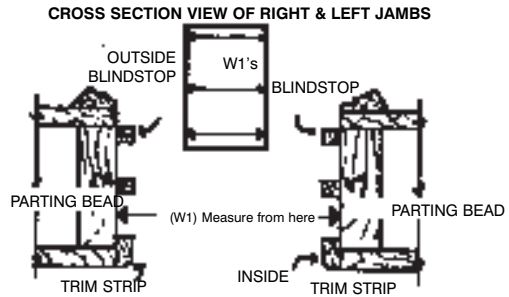

HEIGHT

Measure from the (H1) High Point of the sill of your
window (the surface closest to the inside of window) to
the (H2) top of the window opening. Make 2 measurements-
one at the left side of the window and one at the right
side of the window.

Use the **SMALLEST** of these 2 height measurements
to order the window!

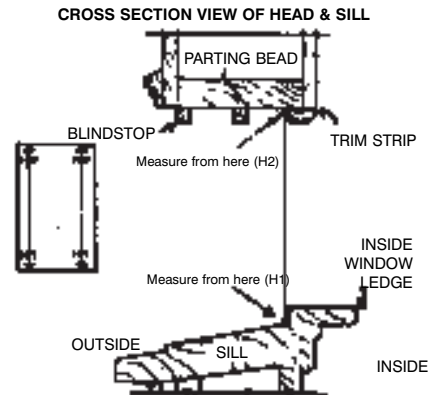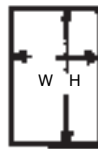

Take these 2 dimensions, for each window you are ordering, to your dealer.
He will supply you with the correct size windows for your openings.

NOTE: Window Rough Opening DEPTH Dimension Needed
(Ignore all pulleys and parting strips when measuring for depth dimension as they will
be removed for replacement window installation.)

There must be at least 3 1/4" of opening depth between the
inside (D1) Window Trim and the outside (D2) Blindstop Strip.

This much area is needed to accept the depth
of the Replacement Window!

(If this much depth area is not available, the outside
Blindstop strip will have to be removed and replaced further
toward the outside of the opening.)

